





Pack 03

BUILD INSTRUCTIONS

STAGE 017: PREPARING THE ENGINE BLOCK

STAGE 018: FITTING THE ENGINE BLOCK AND EXHAUST MANIFOLD

STAGE 019: ATTACHING THE PULLEYS

STAGE 020: FITTING THE OIL PUMP, DISTRIBUTOR AND SPARK PLUG CABLES STAGE 021: FITTING THE ALTERNATOR AND BELTS

STAGE 022: ATTACHING THE AIR BOX

STAGE 023: FITTING THE BACKPLATE AND GEARBOX

STAGE 024: ATTACHING THE OIL SUMP

STAGE 025: MOUNTING THE ENGINE BLOCK ONTO THE CHASSIS

THE SPY WHO LOVED ME © Danjaq, LLC and Metro-Goldwyn-Mayer Studios Inc. THE SPY WHO LOVED ME, **007**²⁷ and related James Bond Indicia © 1962-2024 Danjaq, LLC and Metro-Goldwyn-Mayer Studios Inc. THE SPY WHO LOVED ME, **007**²⁷ and related James Bond Trademarks are trademarks of Danjaq, LLC. All Rights Reserved. Produced under licence from Group Lotus LTD. LOTUS, the Lotus Roundel, car names and all associated logos and distinctive designs are trade marks of Group Lotus LTD.



Advice from the experts

Spare screws are included with each part. Occasionally, you may be instructed to keep spare or unused screws for a later stage. Keep these spares in a safe place and label them correctly.

Please make sure you don't mix up the screws. They look quite similar, but the threads do vary slightly. Using the wrong screws may damage the parts.

When securing parts together using multiple screws, fit each screw loosely to ensure all the parts are correctly aligned before gently tightening them firmly, but not overtight, in the order in which you placed them.

The screwdriver can be magnetized by stroking it with a magnet (fridge magnet, etc.) enabling it to hold the screws and make assembly easier.

If a screw is tight going into a metal part, do not force it as you may shear the head off. Remove it and put a tiny smear of Vaseline, soap or light oil on the thread. That will lubricate it and make it easier to drive home.

During the course of this build, you will receive many pieces that you will assemble immediately – following the instructions in the corresponding stage – and other pieces that you should store safely to one side, for use in future assembly stages.

Left and Right! When building your *The Spy Who Loved Me* Lotus Esprit, the left- or right-hand side refers to that side as if you are sitting in the car.

0

WARNING: Some parts are assembled using magnets. These magnets can cause serious injury if they are swallowed. Keep away from children. If you suspect a magnet has been swallowed, seek medical help straight away.

Stage 017: Preparing the Engine Block

In this stage you'll prepare the engine block by fitting a mounting bracket and breather pipe.



Name			
17-A Engine			-
17-B Bracket			-
17-C Breathe			-
DS05 screws	s x5		-
7		0	
	17-A	17-В	
		DS05	
	17-C		
		DS05 x3	

Stage 017: Preparing the Engine Block



Take the bracket (17-B) and fit it onto the engine block (17-A).



Secure in place with 2xDS05 screws.



Fit the breather pipe (17-C) into the opening in the orientation shown.

Stage 017: Preparing the Engine Block



Stage 018: Fitting the Engine Block and Exhaust Manifold

You'll continue working on the engine block by attaching the exhaust manifold then fitting the engine block together.



Name	Engine block			
	Exhaust manifold			
	screws x5			
	screws x3			
		A B	RA	
			SIV.	
			C. C	
	18-A		18-B	
	DS01	PS02		
	all the the	1		
		and all all as		
	DS01 x5	PS02 x3		

Stage 018: Fitting the Engine Block and Exhaust Manifold



Take the cylinder head assembly (stage 011) and align the exhaust manifold (18-B) as shown.



Fit the exhaust manifold through the openings and onto the screw posts. Secure in place with 2x PS02 screws.



Align the assembly with the engine block (stage 017).



Fit the parts together and secure with 2x DS01 screws.

Stage 018: Fitting the Engine Block and Exhaust Manifold



Fit the engine block (18-A) onto the assembly.



Secure in place with 2x DS01 screws.



In this stage you'll fit the pulleys to their support bracket then fix them to the engine block.



STAGE 019 PARTS LIST Name 19-A Support bracket 19-B Large pulley (A) 19-C Large pulley (B) 19-D Small pulley DS01 screws x2 PS02 screws x3 19-D 19-C **DS01** PS02 **DS01** x2 **PS02** x3



Take part A and B of the large pulley. Fit the pin and screw post through the holes (inset).



Fit the large pulley onto the support bracket (19-A) using the pin and screw post as a guide.



Fit the small pulley (19-D) onto the other mount using the pin and screw post.



Secure the pulleys from underneath with 2x PS02 screws.



Align the support bracket with the engine block assembly (stage 018). The red circles show the fittings for the two parts.



Secure in place with a DS01 screw.



For this stage you'll connect the spark plug cables and distributor then assemble and fit the oil pump to the engine block.



STAGE 020 PARTS LIST

Name

20-A Oil pump

20-B Oil filter

20-C Distributor cap

20-D Distributor

20-E Spark plug cable (short)

20-F Spark plug cable (medium) x2

20-G Spark plug cable (long) x2





Take the engine block assembly (stage 019) and align the two long (20-G) and two medium (20-F) spark plug cables with it as shown.



Fit the cables onto the blue spark plugs.



Take the short spark plug cable (20-E) and fit it onto the middle pin on the distributor cap (20-C).



Fit the first long spark plug cable onto one of the outer pins on the distributor cap.



Fit the other spark plug cables in sequence, plugging them onto the pins clockwise.



Take oil pump (20-A) and oil filter (20-B) then fit them together as shown.



Fit the distributor (20-D) onto the oil pump, using the shaped fitting (circled) as a guide.



Press the distributor cap into the distributor. The fitting is shaped to make a secure connection.



The parts should look like this once fitted together.



To fit the oil pump in place, start by holding the engine block assembly as shown.



Fit the spark plug wires through the gap between the oil pipe and carburettors.



Fit the pin and screw post on the oil pump into the corresponding holes in the support bracket. This will be secured in the next stage.



After assembling the alternator, you'll fit it to the engine block and wrap the belts around the pulleys.



STAGE 021 PARTS LIST

Name	Name		
21-A Oil pipe	21-F Alternator pulley		
21-B Alternator (A)	21-G Belt (thin)		
21-C Alternator (B)	21-H Belt (thick)		
21-D Toothed pulley	PS01 screws x6		
21-E Alternator rotor			





Fit the toothed pulley (21-D) onto the screw post of the oil pump.



Secure with a PS01 screw.



Fit the alternator pulley (21-F) into the shaped hole in the alternator rotor (21-E). Ensure the rotor teeth are oriented as shown. Take part B (21-C) of the alternator. Fit the rotor and pulley into the shaped hole.



The alternator assembly should look like this.



Secure the parts from underneath with a PSOI screw.



Take part A (21-B) of the alternator. Locate the shaped hole and pin on the parts.

Align the shaped hole and pin on the parts then press them together (inset).



Align the alternator with the engine block assembly as shown.



Fit the alternator then secure with 2x PS01 screws.



Align the oil pipe (21-A) with the engine block.



Fit the oil pipe and secure with a PS01 screw.



Take the two belts and compare them. One of the belts is slightly thicker than the other.



Take the thinner belt (21-G). Wrap it around the toothed pulleys and the larger pulley as indicated by the dashed line. The thin belt should feed around the silver part of the larger pulley (inset).



Wrap the thicker belt (21-H) around the pulleys as shown by the dashed line. The thick belt should feed around the black part of the larger pulley (inset).



Stage 022: Attaching the Air Box

In this stage you'll fit the air box in place on the engine block and connect the breather pipe to it.



STAGE 022 PARTS LIST

Name

22-A Air box cover

22-B Air box

PS05 screws x2

PS14 screws x3



Stage 022: Attaching the Air Box



Fit the air box (22-B) onto the carburettors. Use the small holes and pins (circled) to find the correct orientation.



Secure using 2x PS14 screws.



Align the air box cover (22-A) with the air box as shown then fit in place.



Secure the air box cover using a PS05 screw (inset) and a long screwdriver.

Stage 022: Attaching the Air Box



Fit the breather pipe into the recess on the airbox.



Continue working on the engine block by attaching the backplate then fitting the gearbox assembly.



Name 23-A Backplate (A)	
23-B Backplate (B)	
PS02 screws x7	
PS02	
23-A 23-B	



Align part B of the backplate (23-B) with the engine block bracket.



Fit in place then secure with 2x PS02 screws.



Take the gearbox assembly (stage 016) and fit the rectangular tabs over the screw holes in the orientation shown.



Secure with 2x PS02 screws.



Align part A of the backplate (23-A) with the assembly as shown.



Secure with 2x PS02 screws.



Stage 024: Attaching the Oil Sump

In this stage you'll attach the oil sump to the backplate.



STAGE 024 PARTS LIST

Name
24-A Oil sump
24-B Panel x2
PS02 screws x3
P827 screws x5



Stage 024: Attaching the Oil Sump



Take the two panels (24-B). Note that one side of the panels has recessed screw holes (arrows).



Align the panels with the oil sump (24-A) so that the recessed screw holes are face up.



Fit the panels then secure with 4x P827 screws.



Align the oil sump with the engine block assembly (stage 023).

Stage 024: Attaching the Oil Sump



Secure with 2x PS02 screws.



Stage 025: Mounting the Engine Block onto the Chassis

In the last stage of this pack you'll secure the engine block onto the backbone chassis.





Stage 025: Mounting the Engine Block onto the Chassis



Take the engine block assembly (stage 024) and align it with the backbone chassis (25-A) as shown.



Fit the screw posts into the holes.

Stage 025: Mounting the Engine Block onto the Chassis



Secure from underneath using 2x PS05 screws.

